



BESTMEDIA 

 **BM-800 / BM-800R**

— • **USER'S MANUAL** • —

Remote Control



DVD/KTV	Switch the machine's status between DVD and KOD
OPEN/CLOSE	Open/Close DVD Rom
MUTE	Audio output On/Off
VOCAL	Turn On/Off the vocal.
BKG	Switch background video from current video segment to the next.
DELETE	In the singing status, delete the last song in selected song list. In the "Selected" menu status, delete current song in selected song list.
RECORD	Function 1: When playing song, Press Record and "REC" show on the screen, after finish playing, recorded MP3 will be saved to HDD or USB and can be selected in "User song"->"Rec Song", if press again, and "Cancel" show on the screen. Do nothing after finish playing. Function 2 : In Media Record Mode, press this button after selecting songs will start the copy process.
FAVORITE	Function 1: Put the song where the cursor stops into the favorite list. Function 2: When in Favorite menu, delete the song where the cursor stops from favorite list.
ANGLE	Switch angle when playing DVD
INSERT	Insert the current song to the top of the list in "Selected" menu.
SONGNAME	Display menu "SongName"
SINGER	Display menu "Singer"
HOTSONG	Display menu "TopList"
SPACE	Input space when edit song information in "Media Record" menu.
CLEAR	Delete the last code of user input.
SELECTED	Display the "Selected" menu, show the selected song list.
MENU	Display or hide Main menu.
TITLE	Display title when playing DVD.
REV	Fast backward function
FWD	Fast forward function
CHAR+	Function 1: Sort songs in song list by char number of song name Function 2 : move current song in "selected" menu to higher position
CHAR-	Function 1: Sort songs in song list by char number of song name Function 2 : Move current song in "selected" menu to lower position
OSD	Display or hide menu
BACK	Back to the previous menu.
PLAY/PAUSE	Function 1: Play selected song or put selected song into selected list. Function 2: Pause/Replay current song.
STOP	Stop current playing song. *After you have pressed "STOP" then press "PLAY", the first song in the selected song (the next song) list will be played.
PREV	Terminate current song and play previous song.
NEXT	Terminate current song and play the next song.
VOL+/-	Adjust the volume of the song. Status bar with default position also will be displayed on the screen when operating and disappear several seconds later.
KEY+/-	Adjust the key of the song. Status bar with default position also will be displayed on the screen when operating and disappear several seconds later.
TEMPO+/-	Adjust the tempo of the song. Status bar with default position also will be displayed on the screen when operating and disappear several seconds later.
MELODY+/-	Adjust the melody of the song. Status bar with default position also will be displayed on the screen when operating and disappear several seconds later.
MALE/FEMALE	Change the key of midi song into male or female and change the color of lyrics.
RESUME	Reset the key setup.
TUNING	Pop the tuning menu.
APPLAUSE	Play cheer and applause sound.
SETUP	Pop setup menu
SUBTITLE	Change subtitle when playing DVD.
LANGUAGE	Change language when playing DVD.

1 Menu Operation

Press “OSD” or ”MENU” on the remote controller to display the main menu.

Press ”MENU” on the remote controller to display the main menu.

Main Menu
Songs
Tuning Control
Setup
Reserved
Help

Press “OK” to enter a submenu or press “BACK” to back to previous menu.

Press “UP” and “DOWN” to move the cursor. “RIGHT” and “LEFT” to change the parameter.

2 Select a Song

You can select a song by many ways such as song number, song name, etc. The following menu indicates the ways.

Songs	
Language	Random
Singer	Favorite
SongName	My Recording
Top List	New Song
Popular	Celebration

Select a Song by Song Number

When the machine power on and no menu is displayed, you can selected a song by song number.

STEP

Press the num keys on the remote controller → the number shows on right top of the screen and if song exists, the name will be displayed near the number → press “OK” or “PLAY” to play the song.

E.G.

Select one song with 0007 song number, press 7 button on the remote controller, then press “OK” or “PLAY” to make the song play.

*After you have selected a song and there is no song playing, press “PLAY” or “OK” will play that song at once. If there has already been songs playing, press “PLAY” to put the song into the top of the selected list. If you press “OK”, the song will be put to the bottom of the selected list. You can put 99 songs into the selected list in all.

Select a Song by Song Name

In the “SongName” menu, you can select songs by inputting the T26 code of their names. “ABC” means first character. Press the first characters of words of the name of the songs you want to sing, the songs match that condition will be displayed in the right area. Then you can select the song you really want to sing.

E.G.

Input song name: “A WHOLE NEW WORLD”.

Enter the “SongName” menu → Press button “2” for “A” → Press button “9” for “W” → Press button “6” 2 times quickly for “N” → Press button “9” for “W” → the songs match that condition displays in the right area → Press “UP” or “DOWN” to select one song → Press “ENTER” or “PLAY” to play the song.

*After you have selected a song and there is no song playing, press “PLAY” or “OK” will play that song at once. If there has already been songs playing, the song will be put to the bottom of the selected list. You can put 99 songs into the selected list in all.

Select a Song by Writers

In the “Singer” menu, you can select songs by writer. That is also convenient and quickly.

STEP

Enter the “Singer” menu → You can find many singers in it → Press “UP” and “DOWN” to move the cursor, “LEFT” and “RIGHT” to make page up and down → Choose a Writer and press “OK” → System display all songs belongs to this Writer → Press “UP” and “DOWN” to select one song → Press “OK” or “PLAY” to play the song.

Select a Song by Sing Times

The most popular songs are displayed in the “TopList” menu. Right side of the song list is popular degree which means times that song has been sang.

STEP

Enter the “TopList” menu → System display popular songs and the times they have been sang → Press “UP” and “DOWN” to select one song → Press “OK” or “PLAY” to play the song.

*The songs in “TopList” menu list by drop-sequence. The song which is most popular lists at the top.


Select a Song by Random

Follows is the “Random” menu. You can choose the range you want to play random songs in. In the random status, system will play songs automatically until you select a song by hand and the random process is over.



Select a Song in My Recording

“My Recording” menu includes songs downloaded by user and the recorded song for you to select.

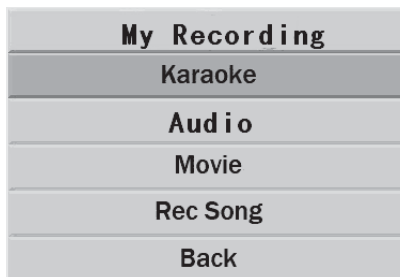

Select a song in Reserved menu & Edit selected songs list PS: The Reserved menu can only be edited, you can not select a song in the selected menu.

You can press “SELECTED” button on the remote controller to enter “Reserved” menu. “UP” and “DOWN” can be used to move the cursor. press “DELETE” can delete the current song. “INSERT” or “OK” to insert the current song to the top of the selected song list. ”CHAR+” or “CHAR-“ to set current song one position previous or next.

E.G.

There are 4 songs have been selected: A, B, C and D by sequence.

Enter the “Reserved” menu → A, B, C and D list in the left area → Press “UP” and “DOWN” to move the cursor → move cursor on D → Press “INSERT” or “OK” → D is set to the top of the selected song list, the sequence is: D, A, B, C → Move cursor on B → Press “DELETE” → Song B is deleted and the sequence is: D, A, C → Move cursor on A → Press “CHAR +” → Song A is set to one position previous and the sequence is: A, D, C → Move cursor on D → Press “CHAR -“ → Song D is set to one position next and the sequence is: A, C, D.

3 Tuning Control

In the tuning menu there are 6 items:

- ❖ **Music Vol** : Volume of MIDI
- ❖ **Vocal Vol** : Volume of MP3, WAVE, VCD, and the MP3 vocal in MIDI Karaoke songs
- ❖ **Music Key** : Key of MIDI song
- ❖ **Tempo** : Tempo of MIDI song
- ❖ **Melody Vol** : Melody of MIDI song
- ❖ **Harmony Vol** : Volume of harmony
- ❖ **Sound Field** : Sound field of MIDI song

Use “UP” and “DOWN” to move to one item and press “LEFT” or “RIGHT” to adjust the position. The position that has a double arrow is the default setting.

4 Setup

Follows is the setup menu:
Default Setup Password is **888888**.

Setup
Display
Media Record
Advanced
Set Default
Back

Display

You can modify the parameters in display setting as you like such as “Score display”, “Score level”, “Menu transparency”, etc.

Following table is the settings in display settings:

Item	Option	Introduction
TV system	PAL/NTSC/PS_PAL/PS_NTSC	Switch TV system PAL/NTSC
Menu Language	English/Chinese	Set the Language of Menu
Menu font	Seng Sim/Seng Com/Black Sim/Black Com	Set the font of Menu
Lyrics font	Seng Sim/Seng Com/Kai Sim	Set the font of Chinese lyric
VGA AD	5 min/10 min/30 min/1 hour /Never	Set the time for slave system display AD
Standby Time Set	10 min/30 min/1 hour /3 hour /Never	Set the time for master system standby
Status bar On/Off	On/Off	Set the status bar on or off
Menu transparency	00~15 (default:05)	Set the transparency degree of the menu. “00” for clarity and “15” for opacity.
iStar	Off/Normal/Expert	Set Synth Correct mode Off: Don't correct synth Normal: Correct the synth in normal range Expert: Correct the synth in a wider range
iHarmony	Off/On/Auto	Set Synth Harmony mode Off: Don't add harmony On: Add harmony when singing Auto: Add harmony in essential place when singing